
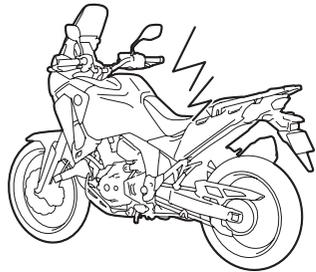
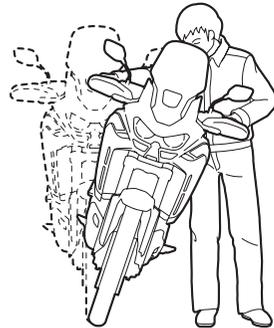



## ALARM SYSTEM

- Alarm system is a device for detecting the vibration. When the sensor detects vibration or movement with the ignition switch in the "Off" or "Lock" position and the system is set, the alarm is activated.
- The alarm sounds and alarm indicator blinks for about 10 seconds when the alarm system detects vibration caused by contact or movement.
- The alarm sounds and alarm indicator blinks for about 60 seconds when the alarm system detects a substantial change in the motorcycle posture. After the alarm sounds for 60 seconds, the alarm system will be reset in that posture.

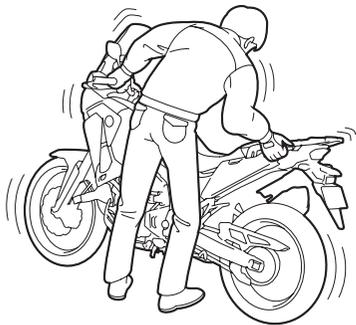

## SETTING THE ALARM SYSTEM

1. Turn the ignition switch to the "Off" position or the "Lock" position.
2. Press the SET button. Within a second, the buzzer sounds for 1 time. After 2 seconds, the buzzer sounds 1 time. The alarm system is activated.  
The buzzer sound can be cancelled using temporary silence mode.

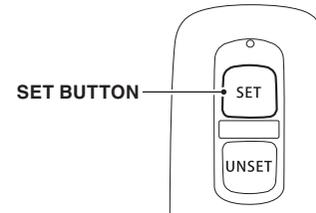

- The alarm indicator flashes while the alarm system is activated.  
The alarm system is cancelled when ignition switch is turned to the "On" position.



- If the ignition switch is left in the "Off" position for more than 10 days, the alarm system will no longer operate. To reset the system, turn the ignition switch to the "On" position once.
- The alarm system uses low-intensity radio waves. It may affect medical equipment such as a cardiac pacemaker.


### NOTICE

When the battery in the motorcycle is weak, the alarm system may not function.

# Alarm System Genuine Accessory User's Guide

## CANCELLING THE ALARM SYSTEM

- Press the UNSET button or turn the ignition switch to the "On" position.

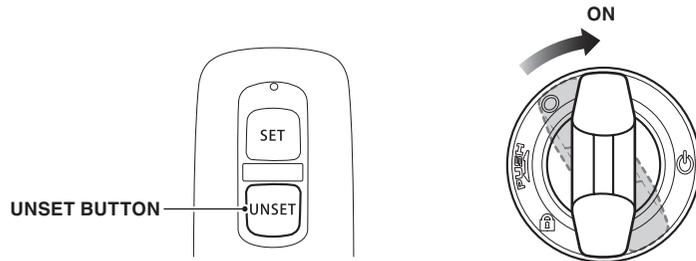


- When UNSET button is pressed, the alarm indicator blinks, and the alarm sounds for 2 times. The buzzer sound can be cancelled using temporary silence mode.



## ADJUSTING THE SENSITIVITY OF ALARM SYSTEM

- You can select 3 sensitivity levels of alarm system.

1. Turn the ignition switch to the "Off" position.
2. Repeat this step 3 times as follows:  
Turn the ignition switch from the "Off" position to the "On" position and press SET button on remote transmitter 2 times.  
Then turn the ignition switch from the "On" position to the "Off" position within 5 seconds.
  - You need to operate this process from the "Off" position to the "On" position within 5 seconds.

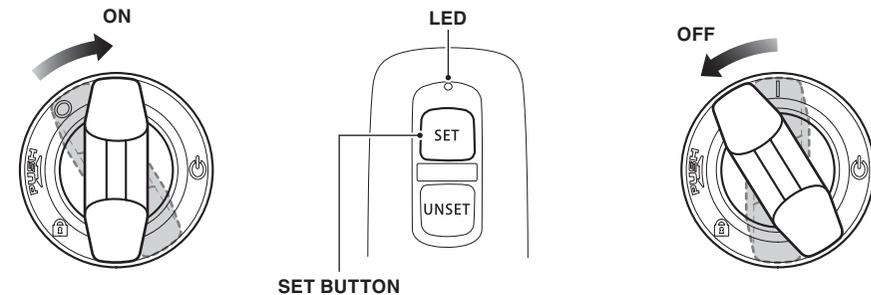

3. Turn and keep the ignition switch to the "On" position.  
Press the SET button to select among 3 sensitivity levels of alarm system.  
3 times of alarm sound: high sensitivity  
2 times of alarm sound: middle sensitivity  
1 time of alarm sound: low sensitivity  
The alarm indicator lights while setting.



4. Turn the ignition switch to the "Off" position to finish setting the sensitivity level.

- To complete your setting, you need to go through step 3 within 60 seconds.
- Make sure that LED on the remote transmitter is green before setting the sensitivity level. Because if it is red, you cannot set the sensitivity level.

# Alarm System

## Genuine Accessory User's Guide

### IF THE ALARM SYSTEM DOES NOT OPERATE PROPERLY

- If any of the following situations arise, battery in the motorcycle is discharged or there is a system problem. Remove the battery and see your dealer.


The alarm does not ring.

The alarm rings but fades out.


The alarm system does not stop.

### ANSWER BACK SYSTEM

- The answer back system is a device to find the position of your motorcycle. When you press the ANSWER BACK button on the remote transmitter with the ignition switch in the "Off" or "Lock" position, your motorcycle informs you the position by sounding the buzzer.

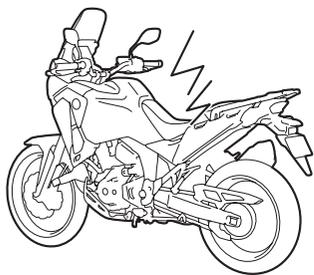


ANSWER BACK BUTTON

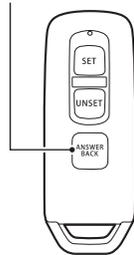

- The answer back system uses low-intensity radio waves. It may affect medical equipment such as a cardiac pacemaker.

### OPERATION

- Press the ANSWER BACK button on the remote transmitter.
  - Answer back system will not function when the ignition switch is in the "On" position.

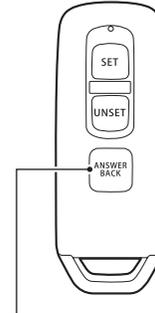

ANSWER BACK BUTTON

- If the ignition switch is left in the "Off" position for more than 10 days, the answer back system will no longer operate. To reset the system, turn the ignition switch to the "On" position once.

### NOTICE


When the battery in the motorcycle is weak, the answer back system may not function.

# Alarm System Genuine Accessory User's Guide

## ADJUSTING THE ANSWER BACK BUZZER SOUND VOLUME LEVEL

- You can select 3 buzzer sound volume levels or mute.

1. Turn the ignition switch to the "Off" position.
2. Repeat this step 3 times as follows:  
Turn the ignition switch from the "Off" position to the "On" position and press ANSWER BACK button on remote transmitter 2 times.  
Then turn the ignition switch from the "On" position to the "Off" position within 5 seconds.
  - You need to operate this process from the "Off" position to the "On" position within 5 seconds.

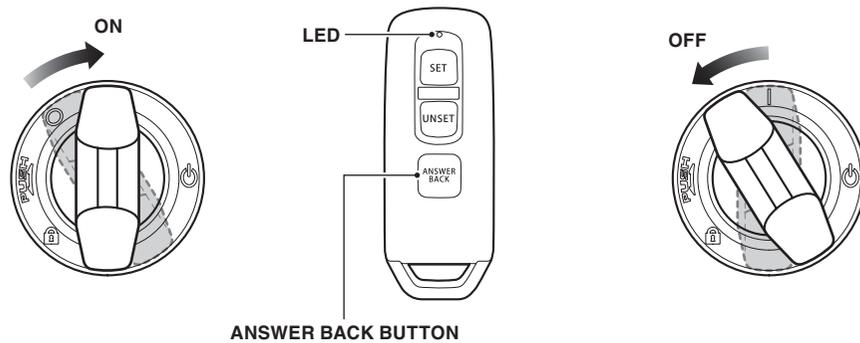


3. Turn and keep the ignition switch to the "On" position. Press the ANSWER BACK button to select among 3 levels of sound volume or mute.
  4. Turn the ignition switch to the "Off" position to finish setting the buzzer sound volume level.
- To complete your setting, you need to go through step 3 within 60 seconds.
  - Make sure that LED on the remote transmitter is green before setting the buzzer sound volume level. Because if it is red, you cannot set the buzzer sound volume level.

## CHANGING THE ANSWER BACK BUZZER SOUND PATTERN

- You can select 3 buzzer sound patterns.

1. Turn the ignition switch to the "Off" position.
2. Repeat this step 3 times as follows:  
Turn the ignition switch from the "Off" position to the "On" position and press ANSWER BACK button on remote transmitter 3 times.  
Then turn the ignition switch from the "On" position to the "Off" position within 5 seconds.
  - You need to operate this process from the "Off" position to the "On" position within 5 seconds.

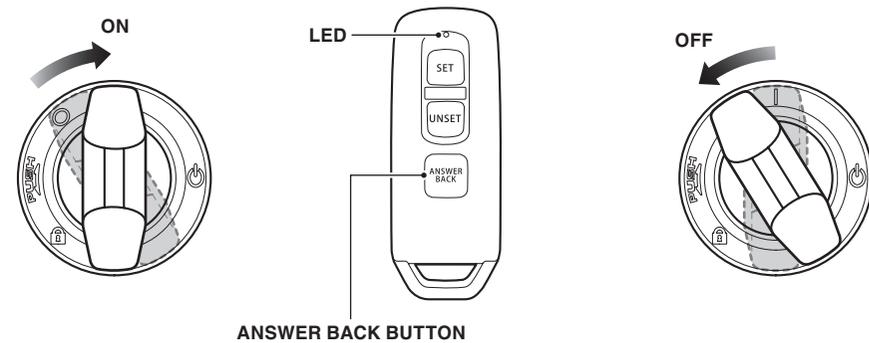

3. Turn and keep the ignition switch to the "On" position. Press the ANSWER BACK button to select among 3 buzzer sound patterns.
  4. Turn the ignition switch to the "Off" position to finish setting the buzzer sound patterns.
- To complete your setting, you need to go through step 3 within 60 seconds.
  - Make sure that LED on the remote transmitter is green before setting the buzzer sound patterns. Because if it is red, you cannot set the buzzer sound patterns.

# Alarm System Genuine Accessory User's Guide

## TEMPORARY SILENCE MODE

- Temporary silence mode is the immediate way to turn off the answer back system buzzer sound.

### Enable:

Press and hold ANSWER BACK button about 2 seconds, the LED on remote transmitter is changed to be red.

### Disable:

Re-press and hold ANSWER BACK button about 2 seconds, the LED on remote transmitter is changed to be green.


## REPLACING THE REMOTE TRANSMITTER BATTERY

- When the remote transmitter battery begins to get weak, it may take several pushes on the button to operate the alarm system or answer back system, and the LED will get dim. Replace the battery as soon as possible.


We recommend to see your dealer for this service.

**Battery type:** CR1632

1. Remove the upper case by carefully prying on the edge with a coin or a screw driver.
  - **Wrap a coin or a screwdriver with a protective cloth to prevent scratching the remote transmitter.**
  - **Do not touch the circuit or terminal. This may cause problems.**
  - **Be careful to avoid scratching the waterproof covering or allowing dust to enter.**
  - **Do not forcibly dismantle the remote transmitter body.**

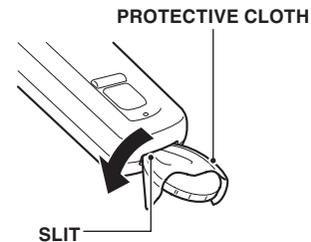

2. Replace the old battery with a new battery with the negative (-) side facing up.
3. Snap the two halves of the remote transmitter back together.
  - **Make sure that upper and lower cases are set in the right position.**

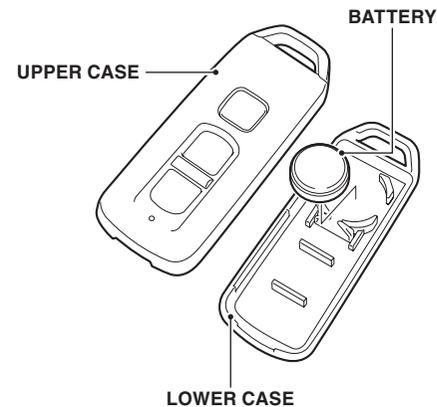

### WARNING

**Chemical Burn Hazard: do not swallow battery.** If swallowed, the battery can cause severe internal burns and even death.

- **Keep battery away from children and battery compartment securely closed.**
- **If the battery compartment does not close securely, stop using the product and keep it away from children.**
- **Immediately seek medical attention if a child may have swallowed battery.**