

## 08022 Honda CRF1100L Africa Twin Adventure Sports Wind Deflectors Fitting Instructions

### Kit Includes:


1.	X1	C08022A	Wind Deflector 'A' (LHS)
2.	X1	C08022B	Wind Deflector 'B' (RHS)
3.	X2	CBOLM60001	M6 x 20mm Bolt
4.	X2	CBOLM50001	M5 x 30mm Bolt
5.	X4	CSPAM60001	Spacer

*The installation process is replicated on both sides.*

### Assembly Instructions

- Remove the OEM fairing bolts from the motorcycle (see **Fig. 1**).
- Fit the Pyramid wind deflectors using the fixings supplied (see **Fig. 2** for positions).

**Please note: we advise that all fixings are checked periodically.**

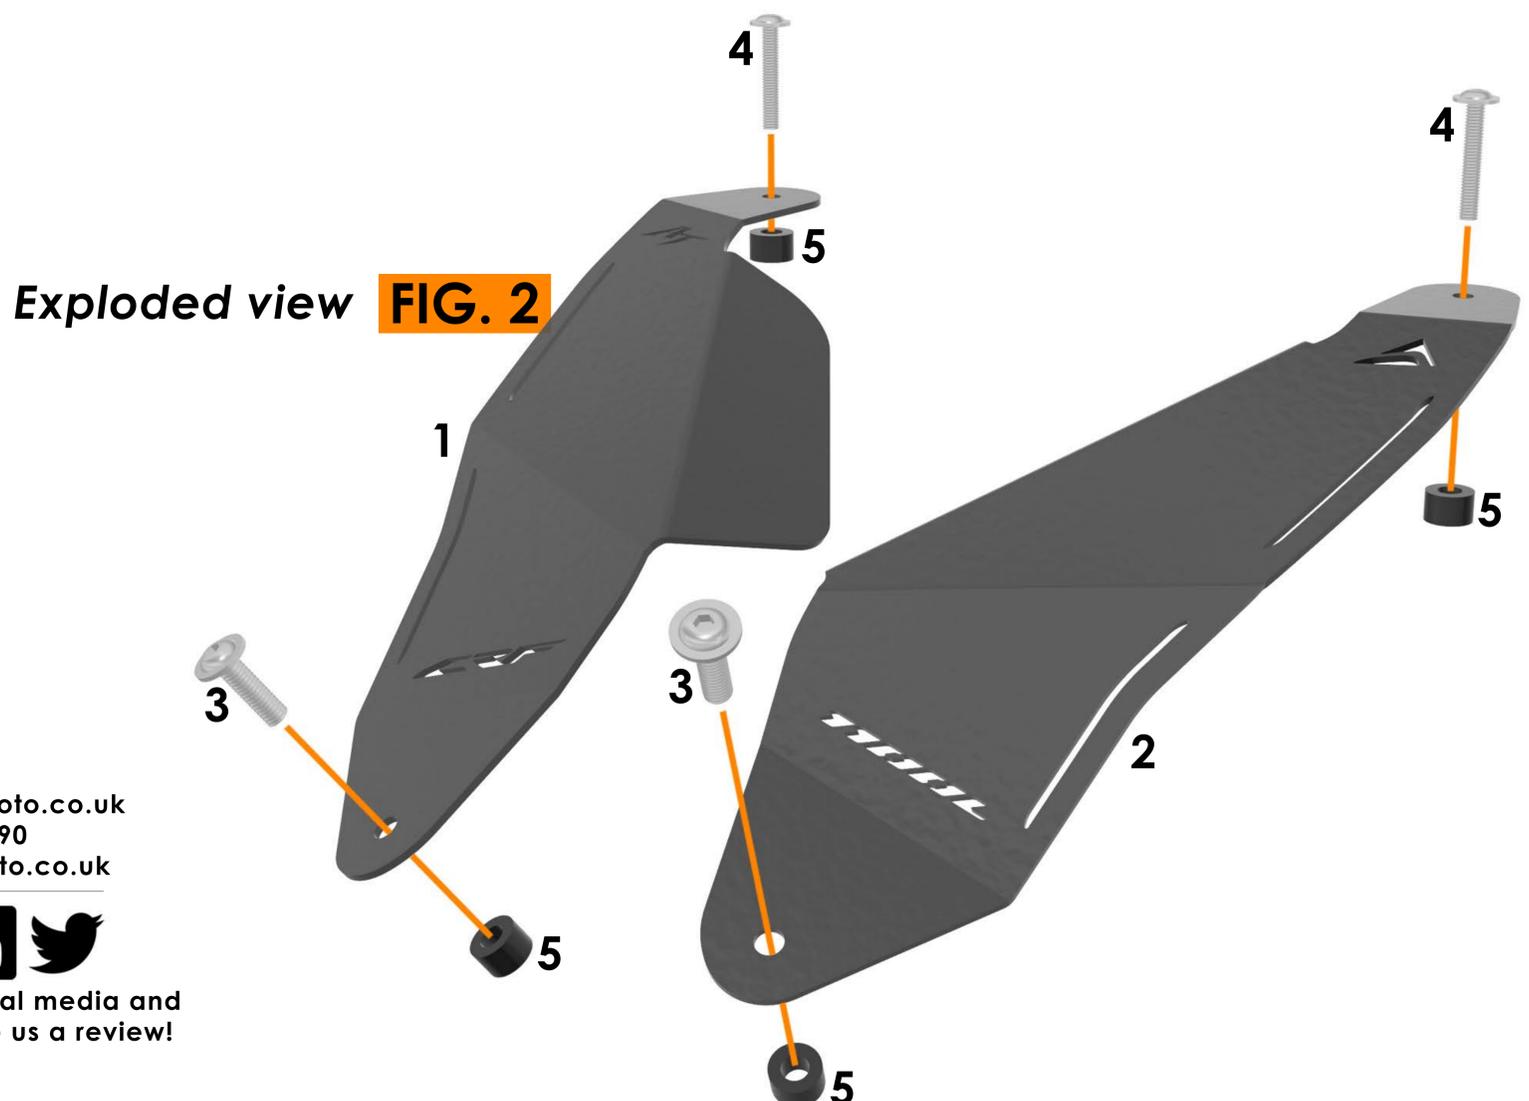

Any questions?  
[sales@pyramidmoto.co.uk](mailto:sales@pyramidmoto.co.uk)  
 +44 (0)1427 677990  
[www.pyramidmoto.co.uk](http://www.pyramidmoto.co.uk)



Follow us on social media and  
 feel free to leave us a review!